

The DRONE RACER mode is added for the latest firmware of the “Syncro Touch KT-432PT” transmitter unit!

How to update the firmware of the KT-432PT



1. Please check our official website for the latest version of firmware for KT-432PT. If you update the firmware, all of the setting will set back to default, so please record your own setting variables if need
2. Please see instruction manuals of KT-432PT and DRONE RACER for binding procedures.



3. Choose “Mode setup” after the firmware is updated.



4. Choose “Drone Racer” then the icon of “Mode setup” will change to DRONE RACER.



5. Go back to the status screen and check CH3 and CH4 appear on the screen.



6. Press “SW3” (CH3: Take off/Land switch) on the bottom of the steering wheel and press “SW3” on the grip to make CH3 and CH4 status become like the photo below.

7. Turn the steering wheel to the left fully and pull the throttle trigger to unlock the safety function of the DRONE RACER (LEDs on rear arms will become red). Then press “SW3” for take off and press “SW3” again to land.

8. To change the height, press “SW1” .

Note: When the DRONE RACER has stopped in emergency “SW3” is still in take off mode. In such case the safety function cannot be unlocked. Please press “SW3” again to set to “Land” so that you can unlock the safety function and take off again.